


# Gary Metall-Terrassenbox 220/ Gary Metal Terrace Box 220

# Weka

Art.-Nr: 7010009

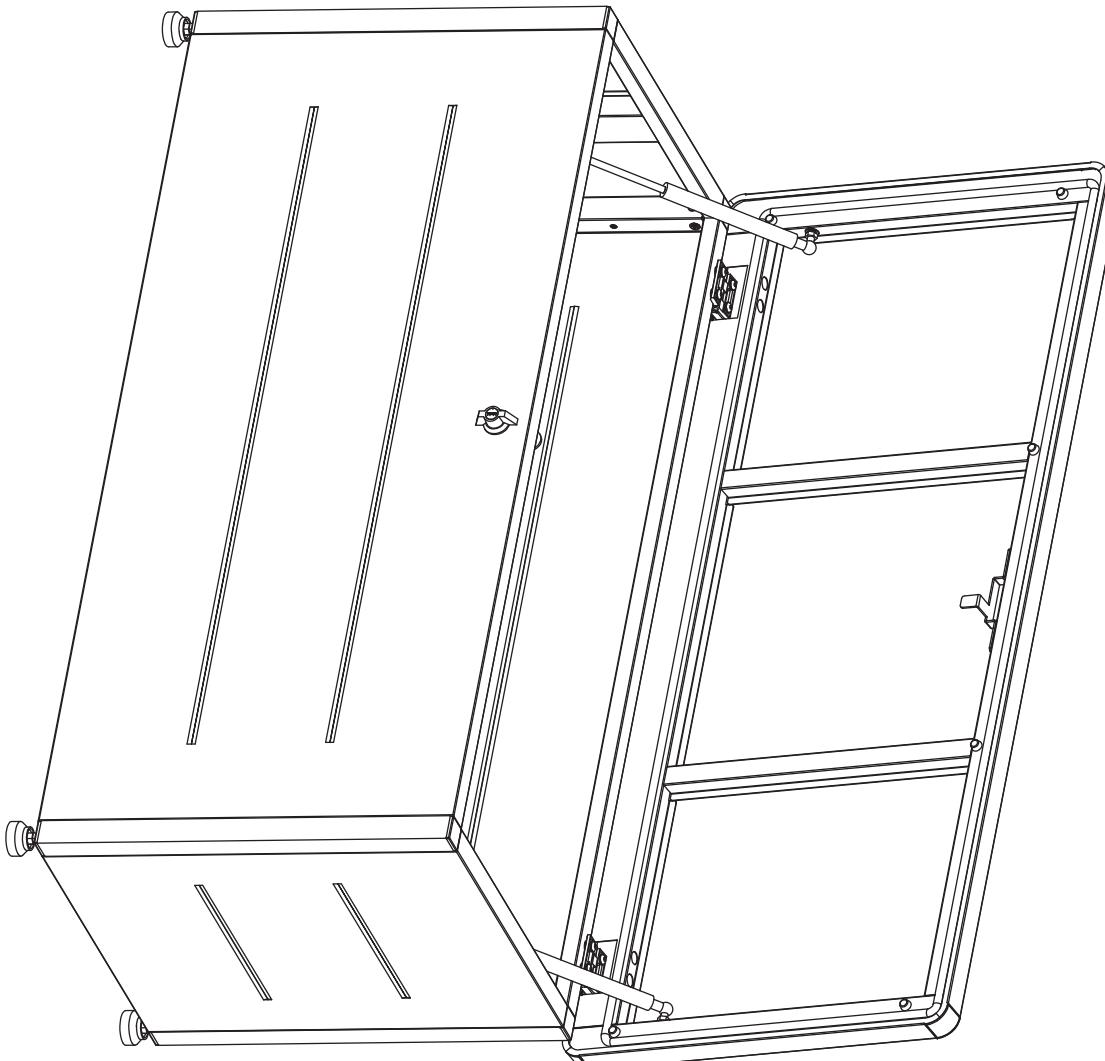





## Montageanleitung/ Assembly instructions

Weka Holzbau GmbH  
Postfach 20 02 04  
D-17013 Neubrandenburg

Sie erreichen uns/ You can reach us:  
Mo - Fr 08:30 - 18:00 Uhr

+49 (0)395/42908-0



[www.weka-holzbau.com](http://www.weka-holzbau.com)

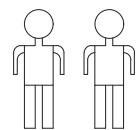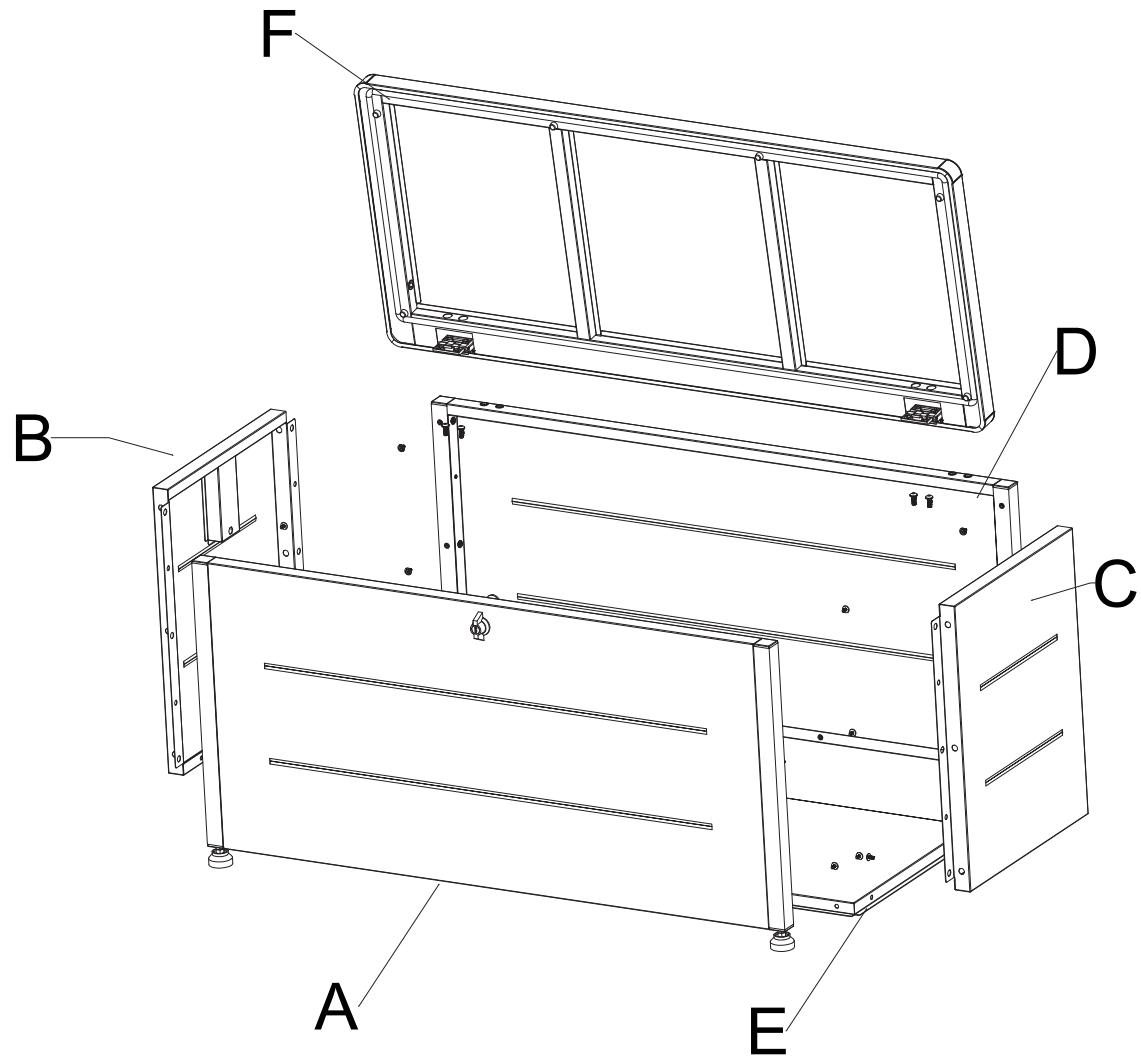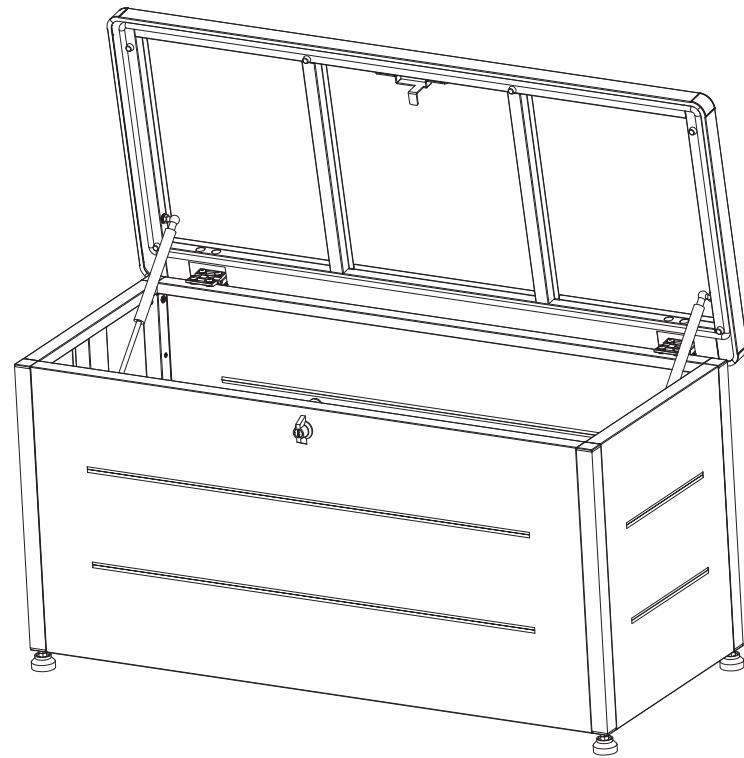




**30Min**

Ax1	Bx1	Cx1	Dx1	Ex1	
Fx1	Gx1	Hx1	Ix4	Jx2	
Kx38	Lx4	Mx38	Nx4	Ox1	Px1
M4x10mm	M6x16mm	$\varnothing 4 \times \varnothing 12 \times 1\text{mm}$			

# STEP1

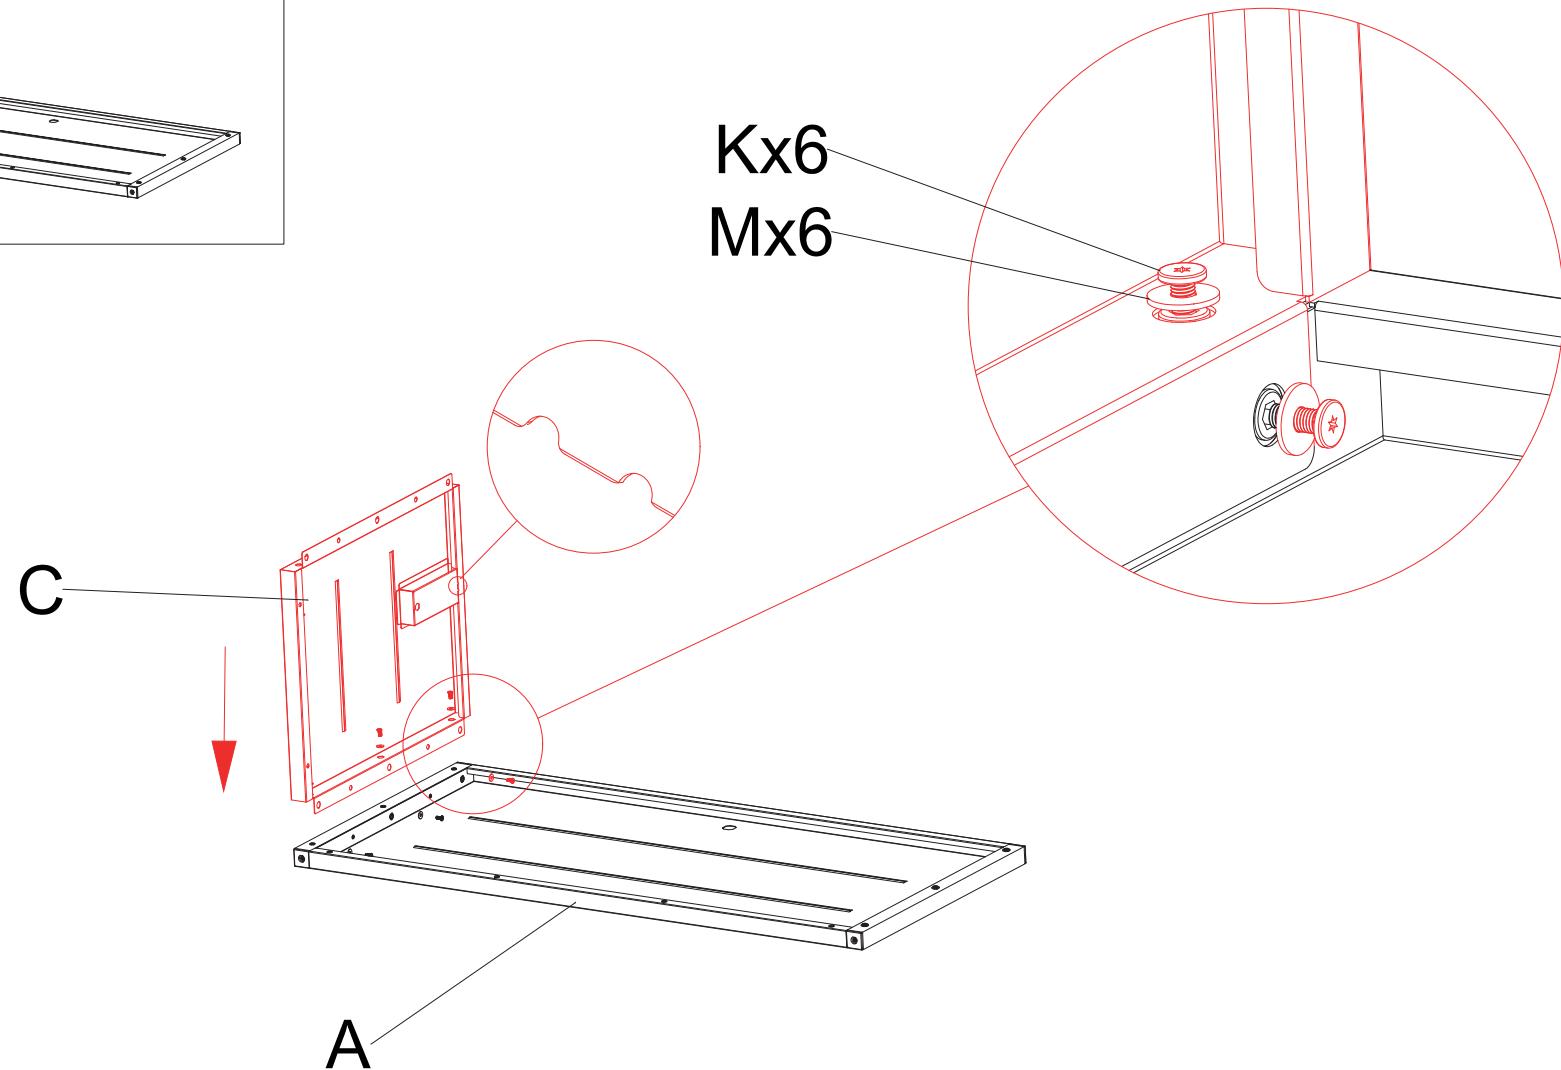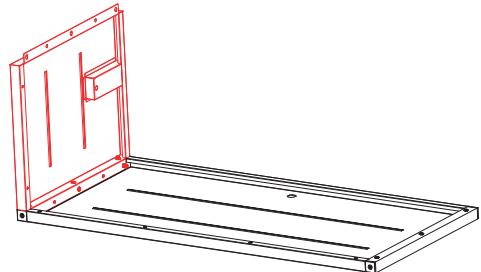


## STEP2

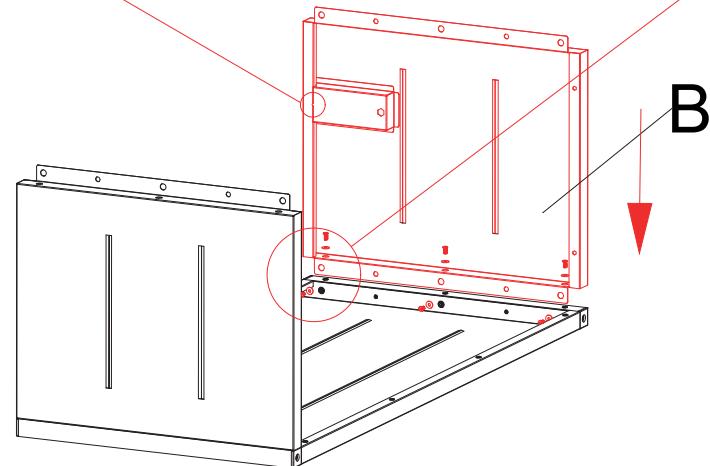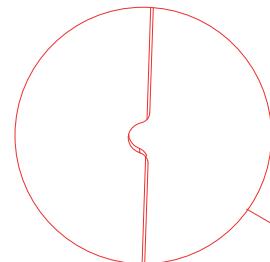
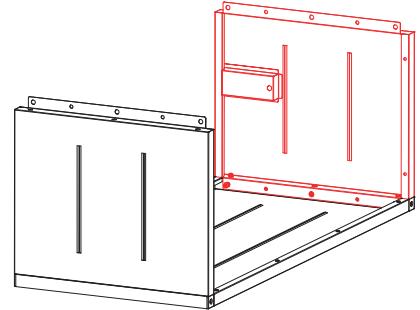


Kx6  
Mx6



B

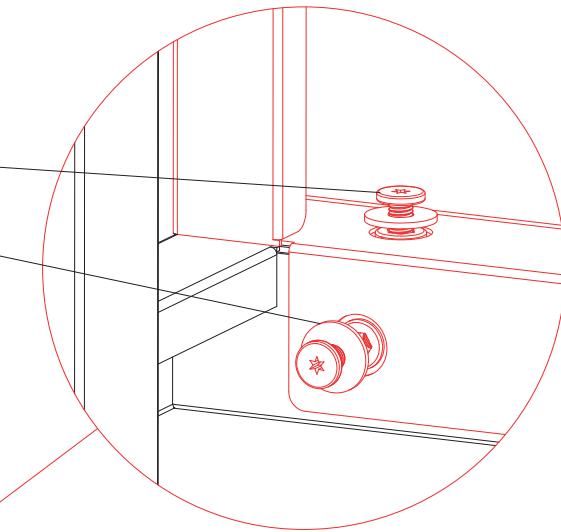


## STEP3-1

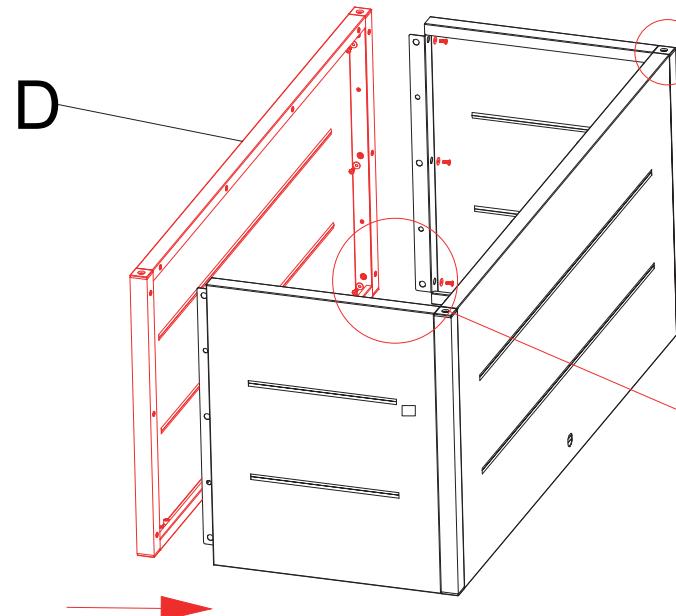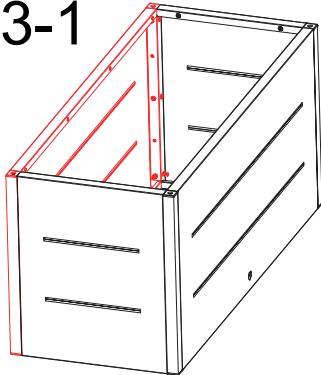

Mx6  
Kx6

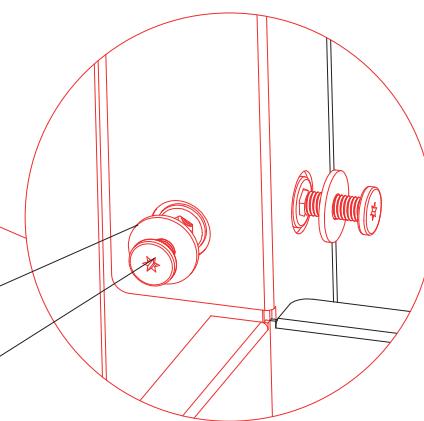
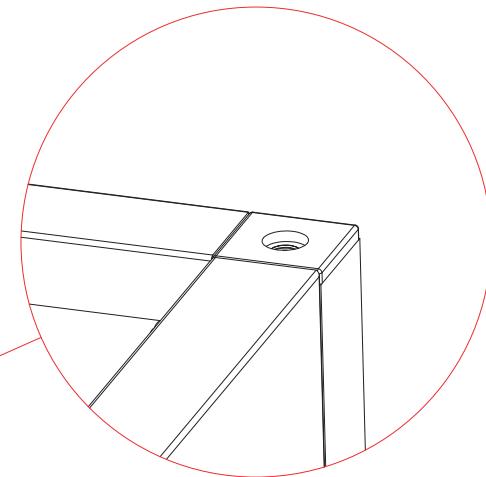


## STEP3-2


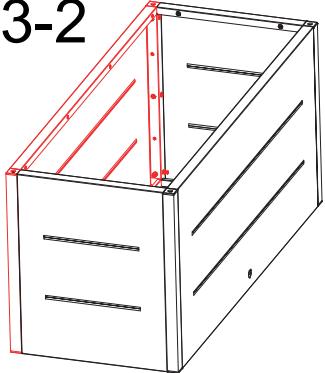


Mx6

Kx6

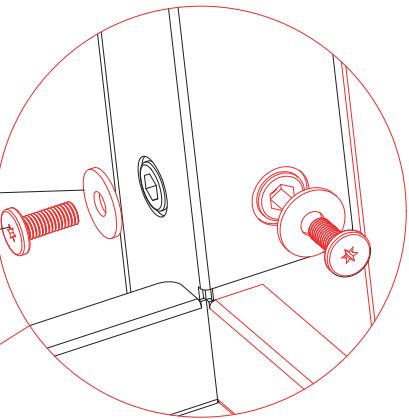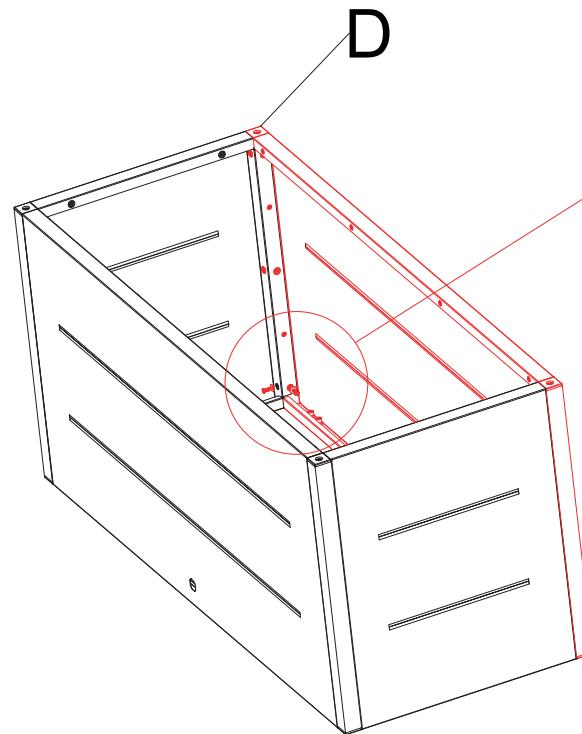


## STEP4

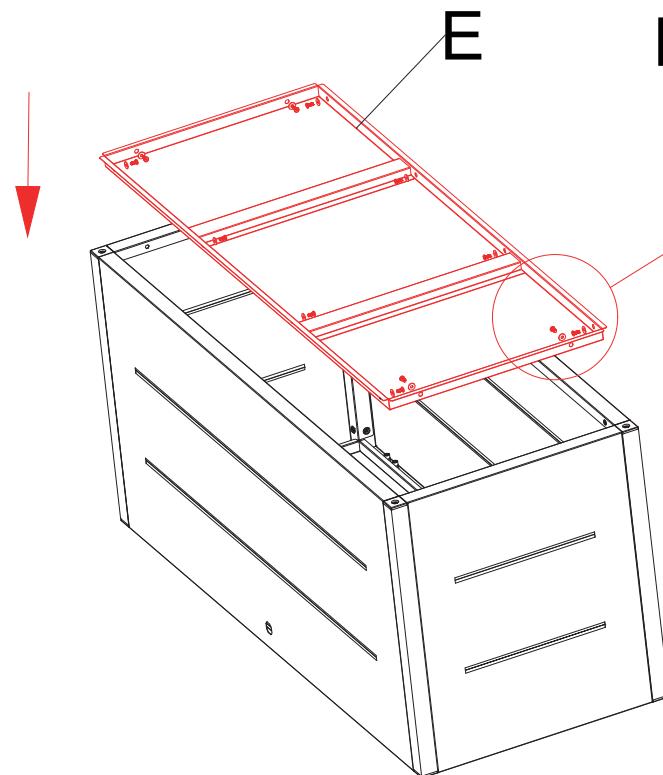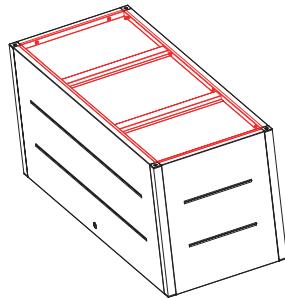


Mx12



Kx12

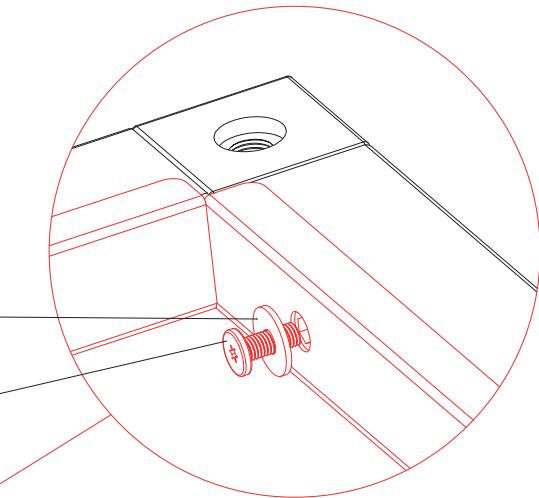


## STEP5

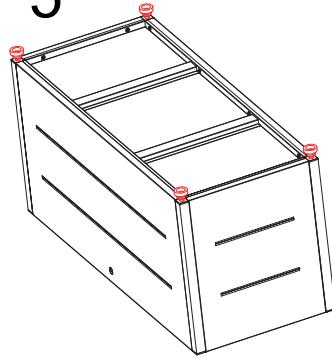


l x 4

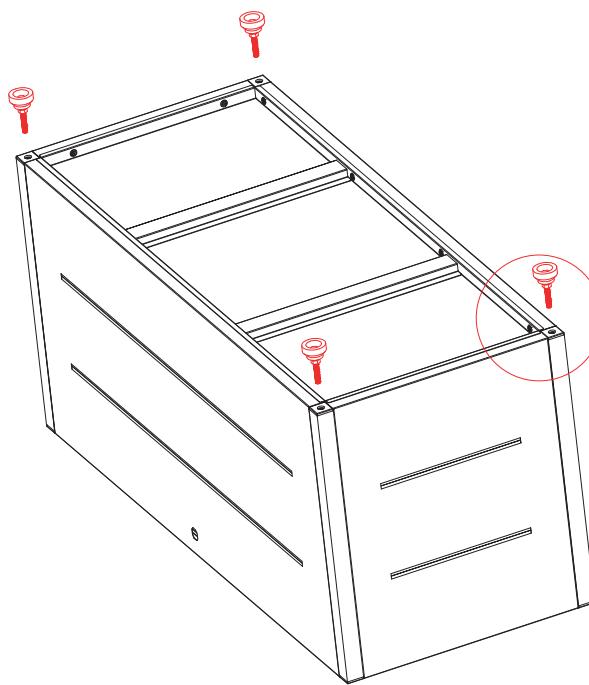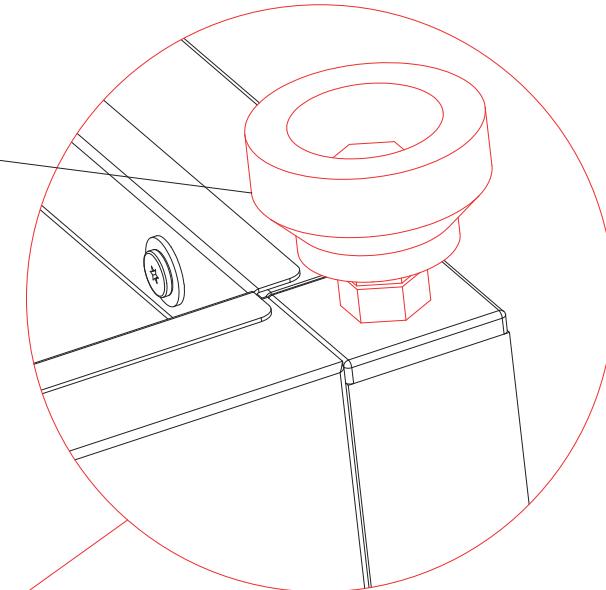


## STEP6

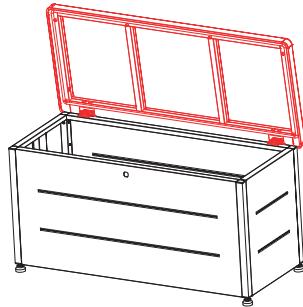


Lx4

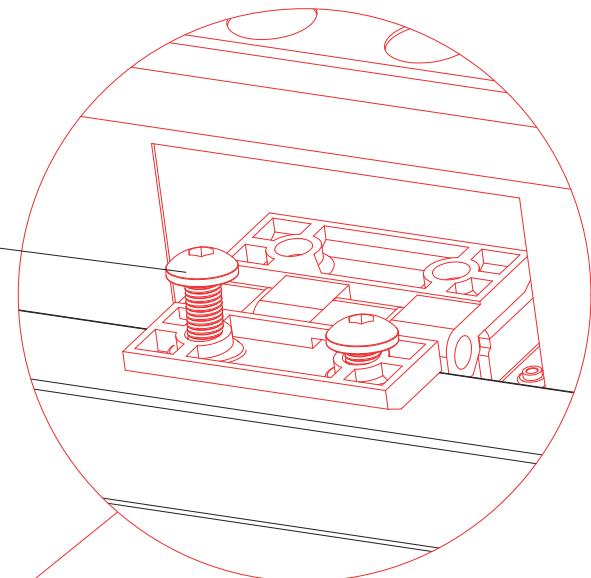


F

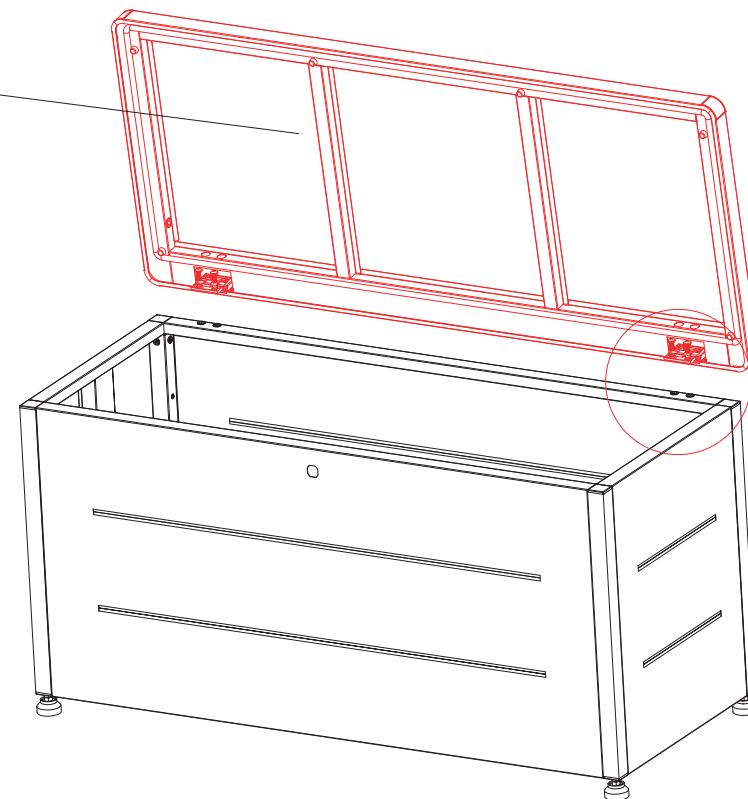


# STEP7

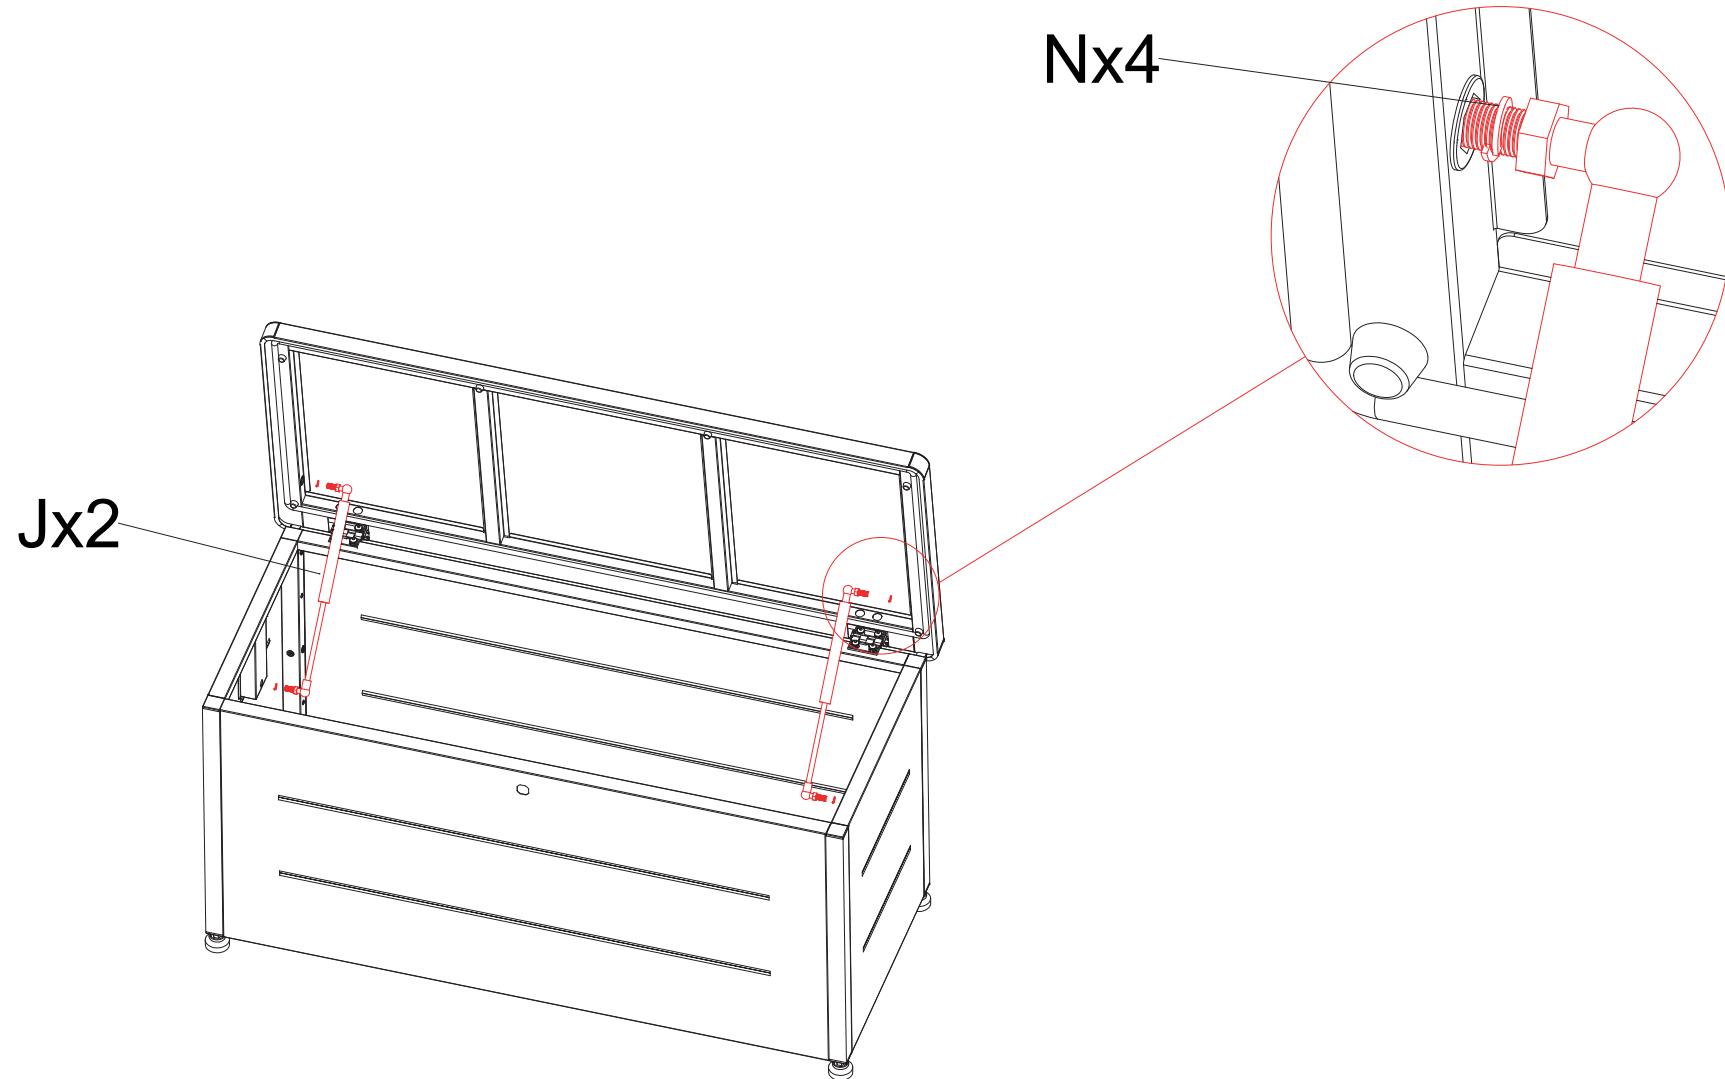

## STEP8

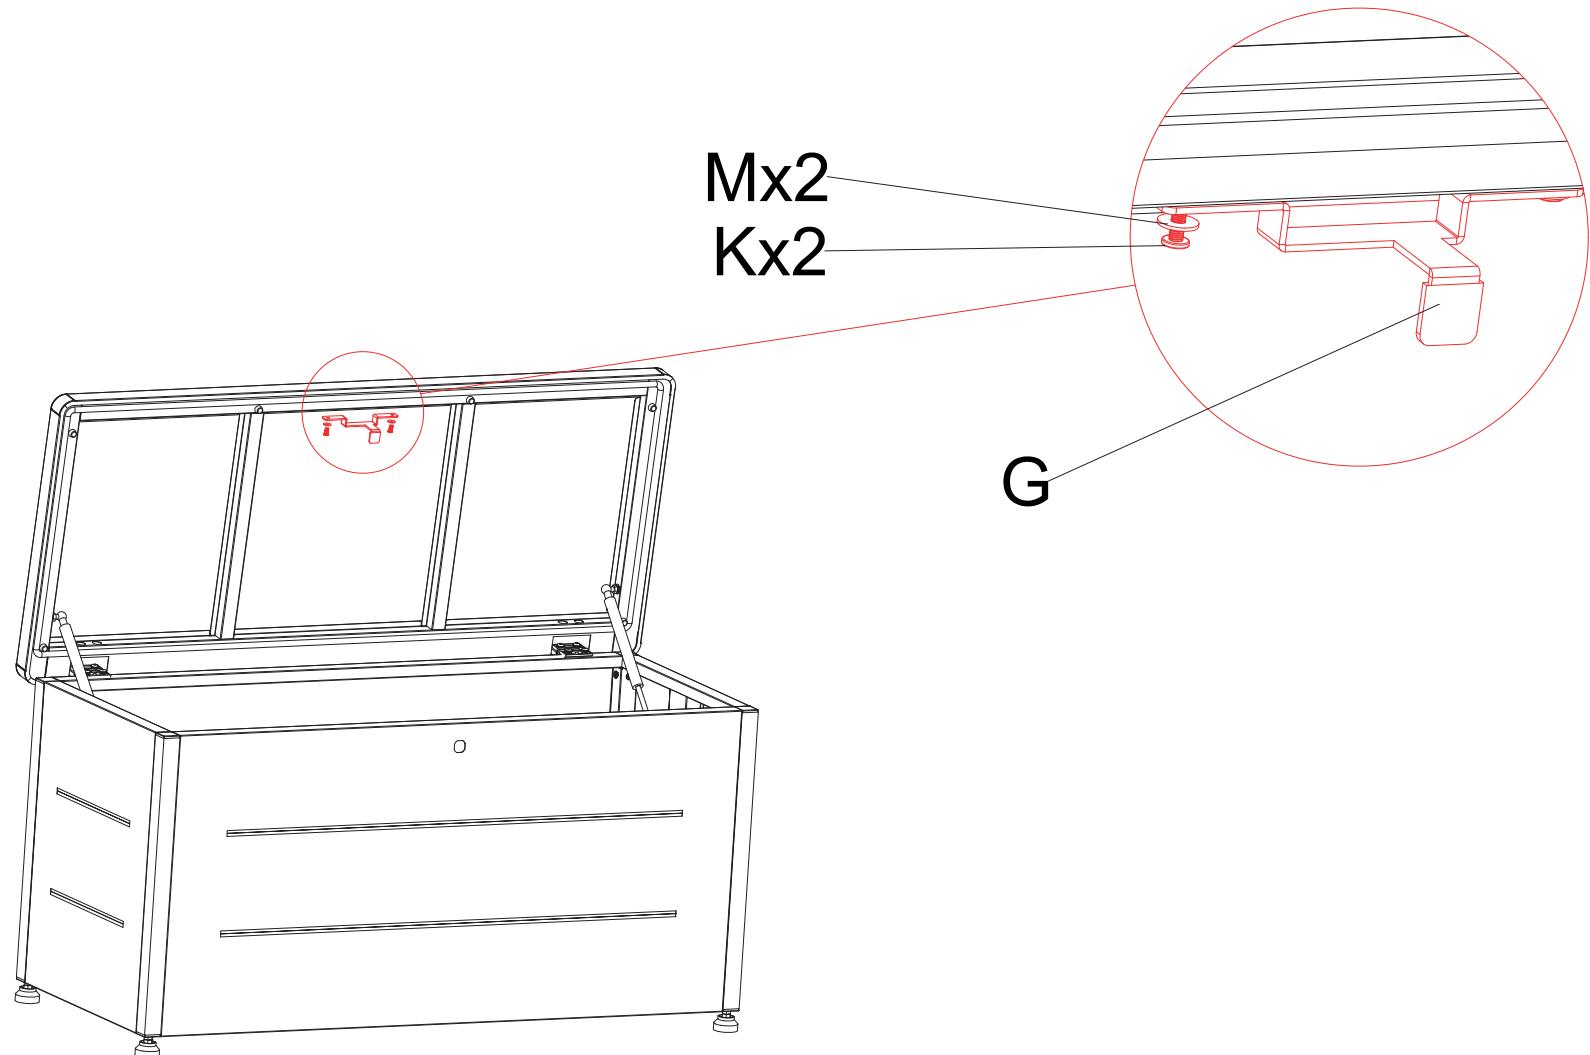

# STEP9

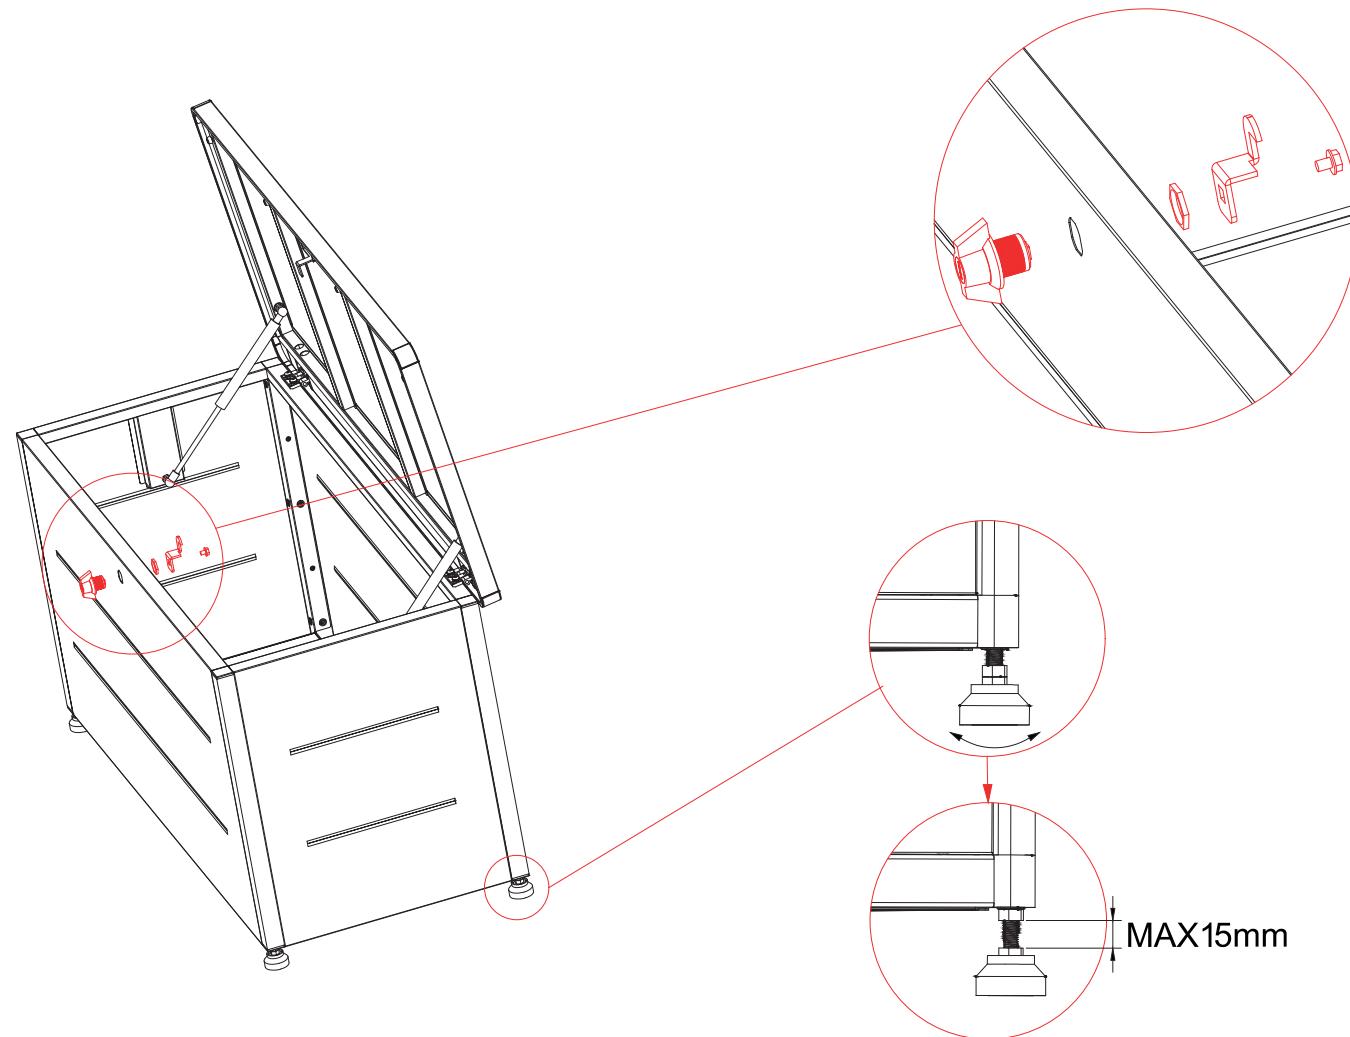

DE: Nach der Installation des Griffes justieren Sie die verstellbaren Füße und verwenden Sie eine Wasserwaage, um sicherzustellen, dass die Box gerade ist.

EN: After installing the handle, adjust the adjustable feet and use a spirit level to ensure that the box is level.