


**Gary Metall-Terrassenbox 700/
Gary Metal Terrace Box 700**

Art.-Nr: 7010011

weka



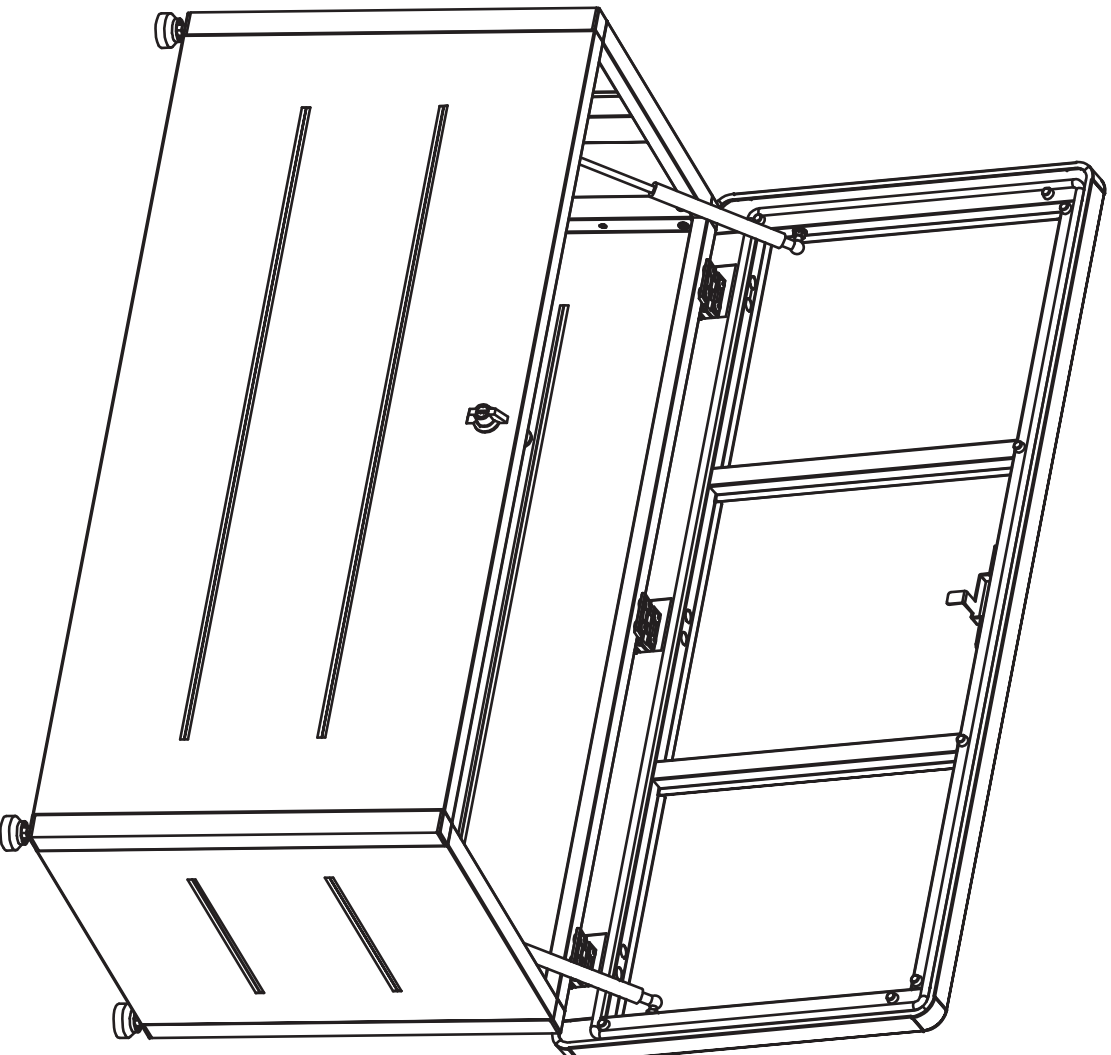


**Montageanleitung/
Assembly instructions**

















**weka Holzbau GmbH
Postfach 20 02 04
D-17013 Neubrandenburg**

www.weka-holzbau.com



**Sie erreichen uns/ You can reach us:
Mo - Fr 08:30 - 18:00 Uhr
+49 (0)395/42908-0**

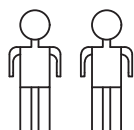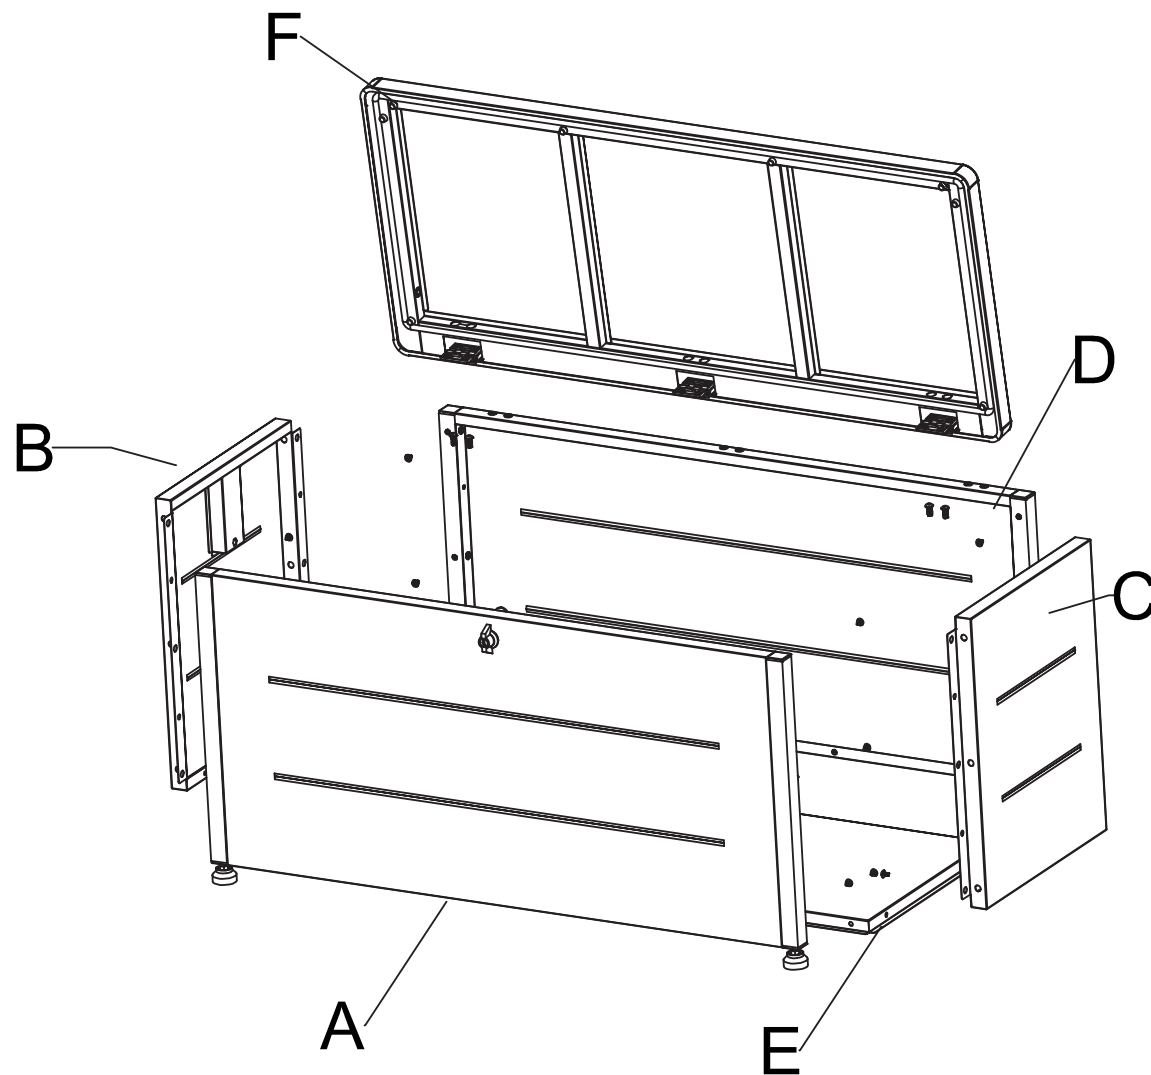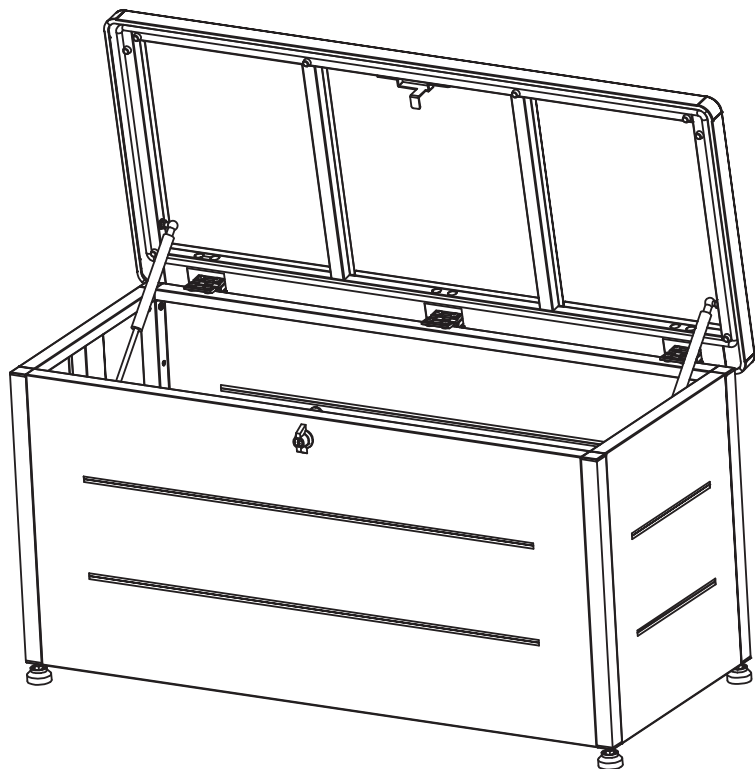




30Min

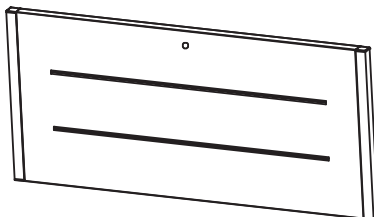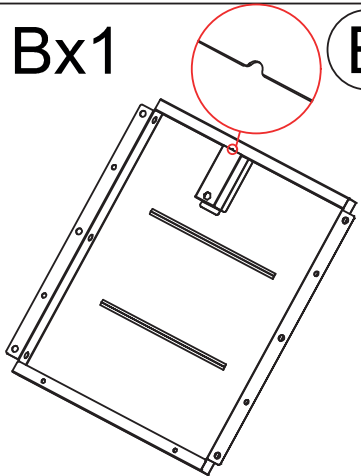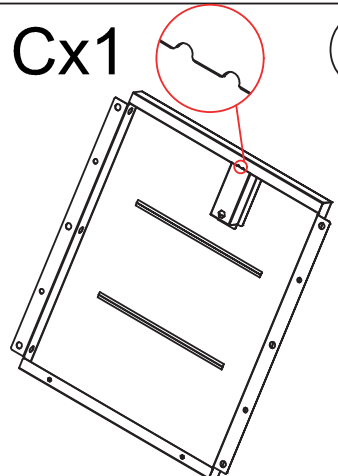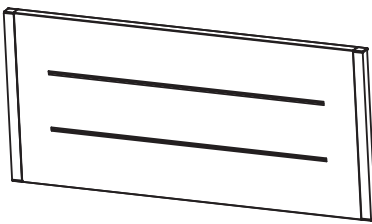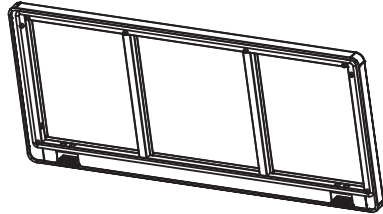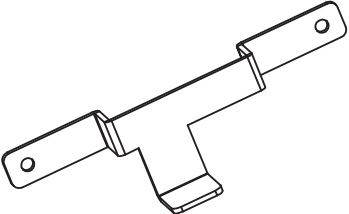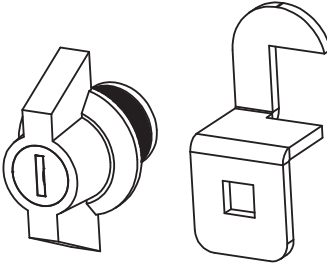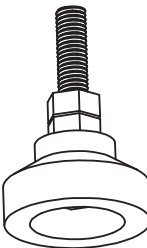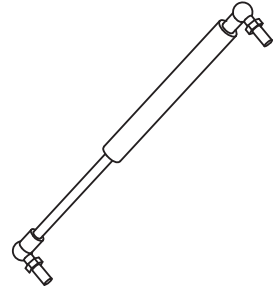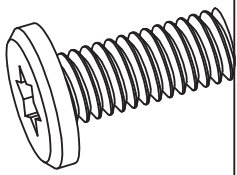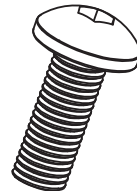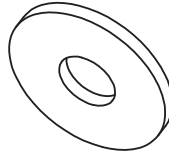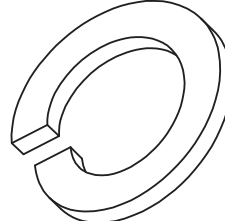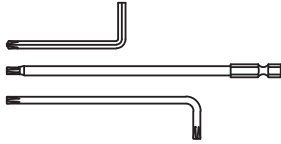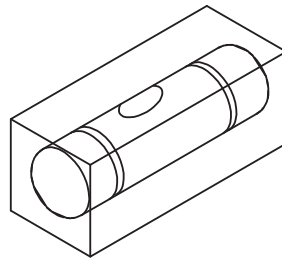Ax1	(B) Bx1	(B) Cx1	(B) Dx1	(B) Ex1	(A)
					
Fx1	(A) Gx1	(B) Hx1	(B) Ix4	(B) Jx2	(B)
					
Kx38	(B) Lx6	(B) Mx38	(B) Nx4	(B) Ox1	(B) Px1
					
M4x10mm	M6x16mm	Ø4xØ12x1mm			


STEP1

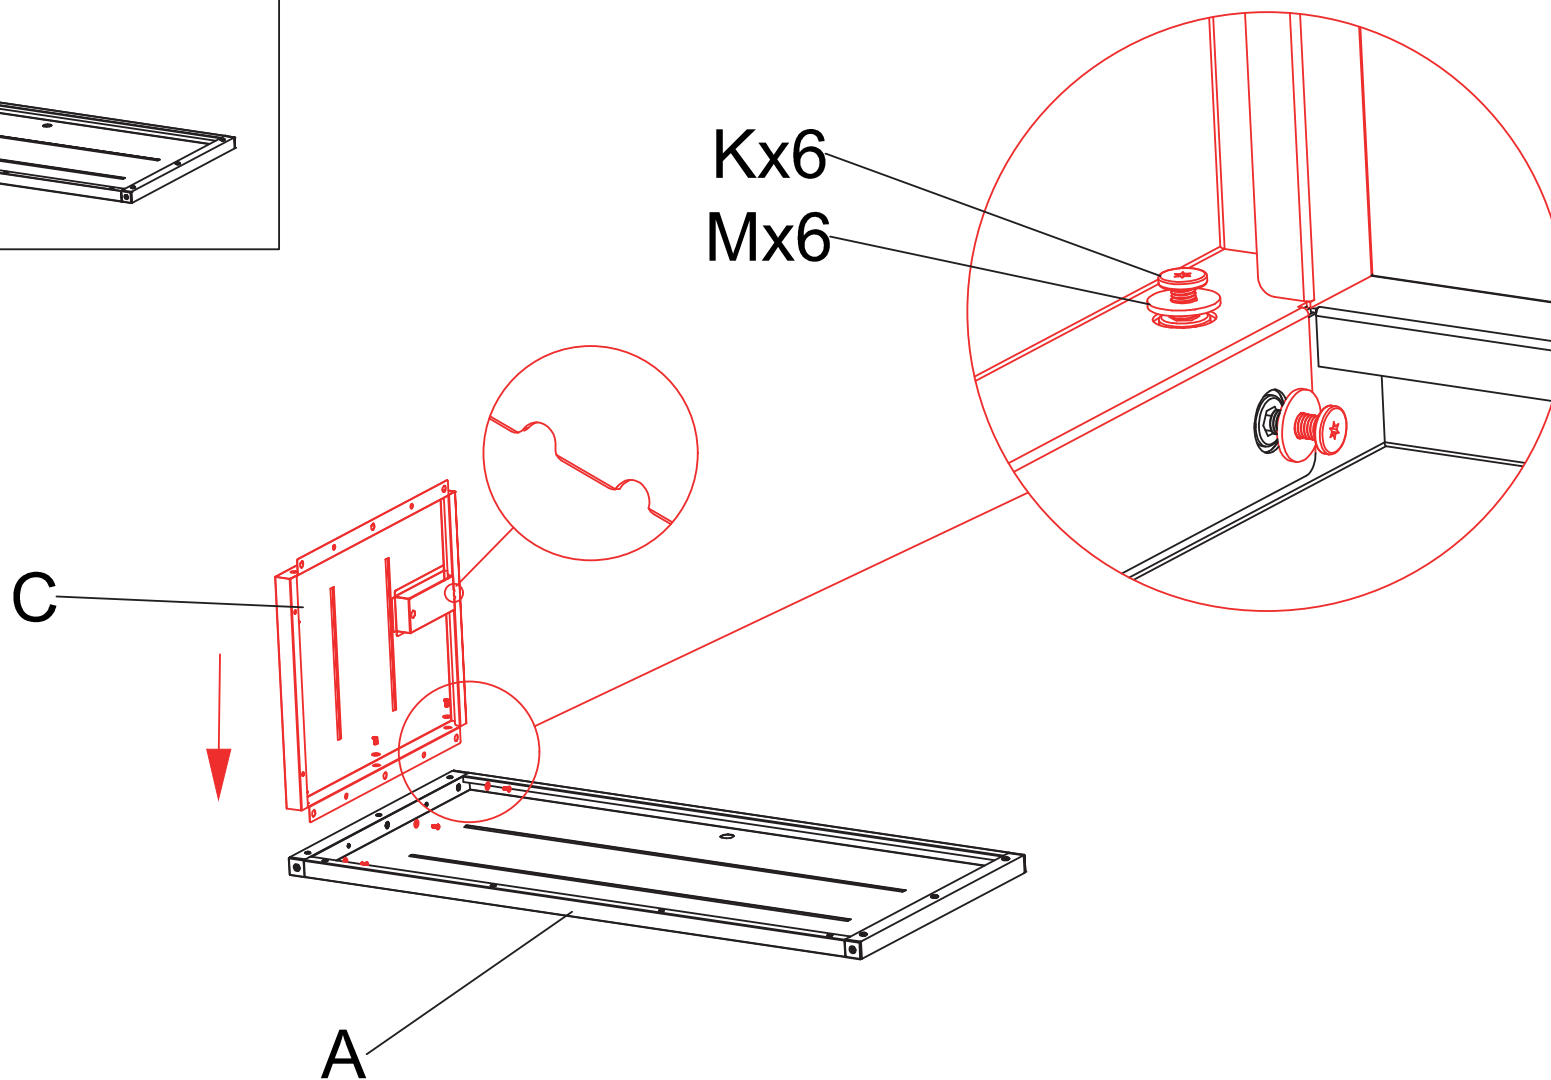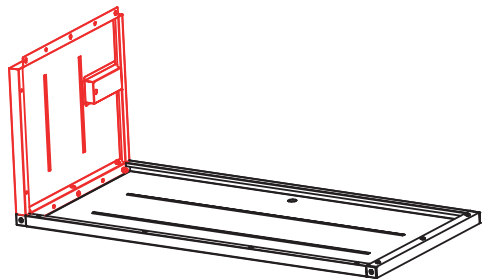


STEP2

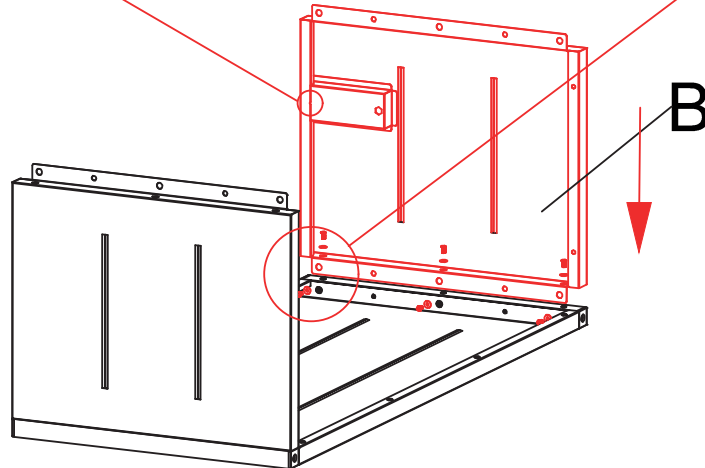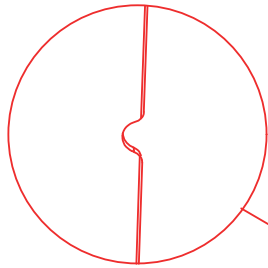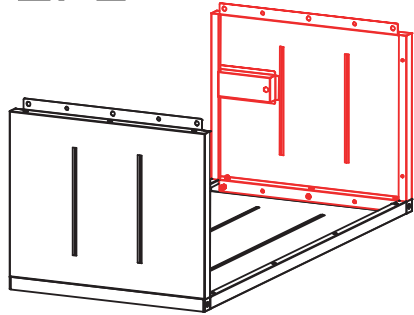




Kx6
Mx6

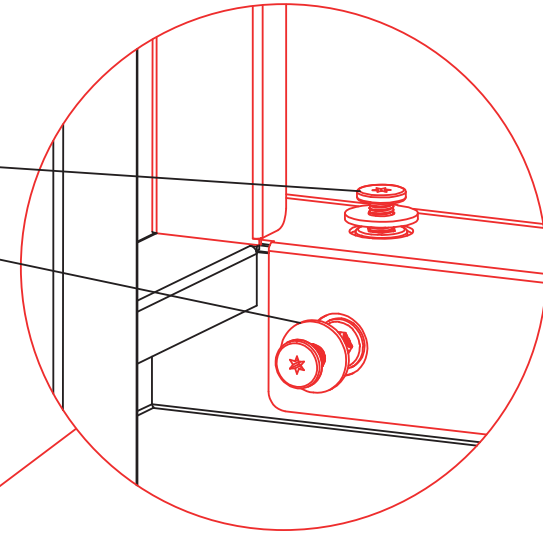

STEP3-1

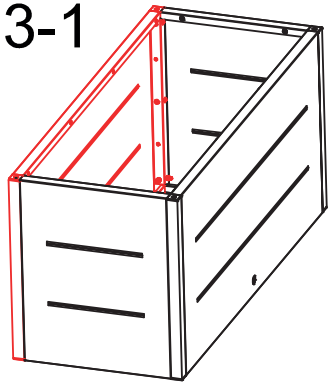


D

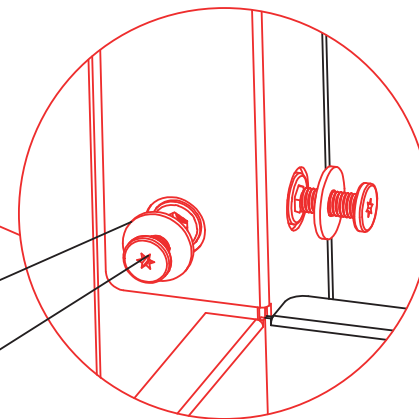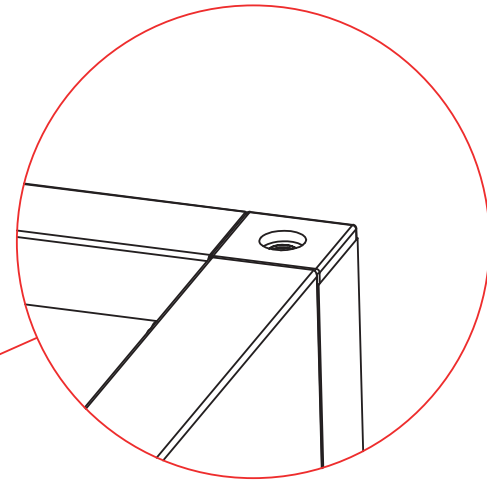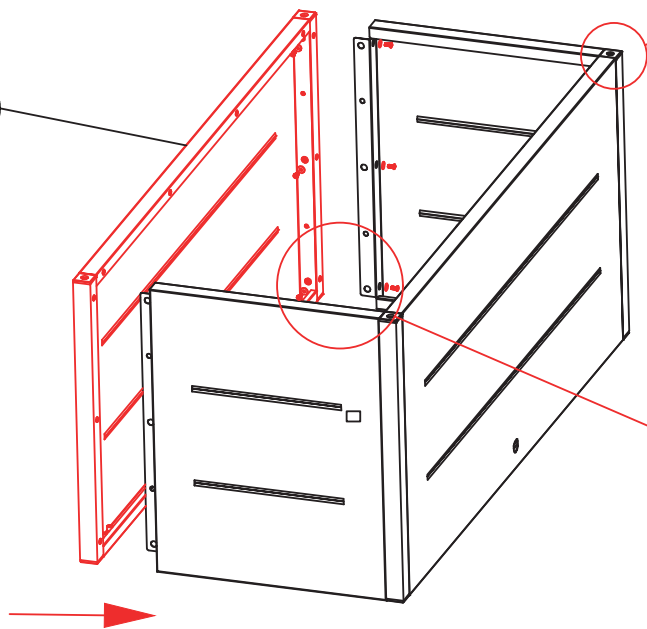

Mx6


Kx6

STEP3-2

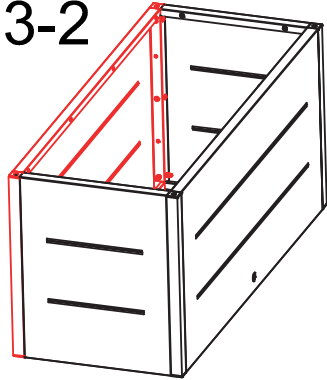


Mx6



Kx6

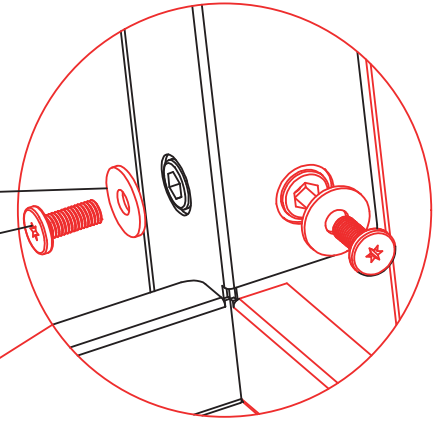


D

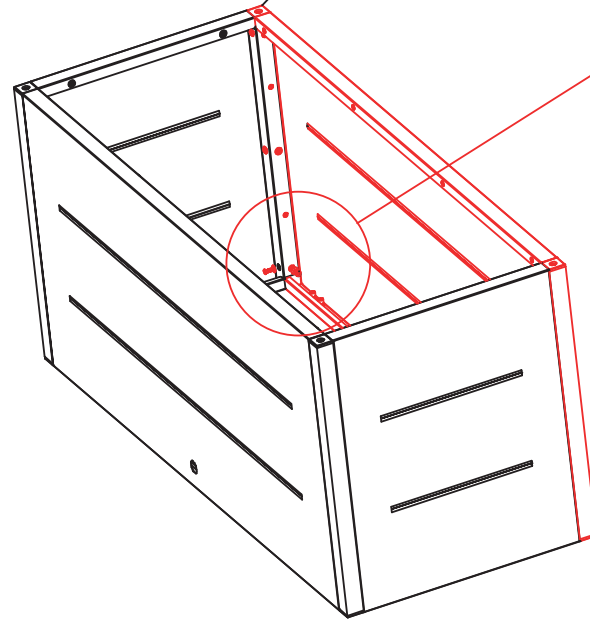



STEP4

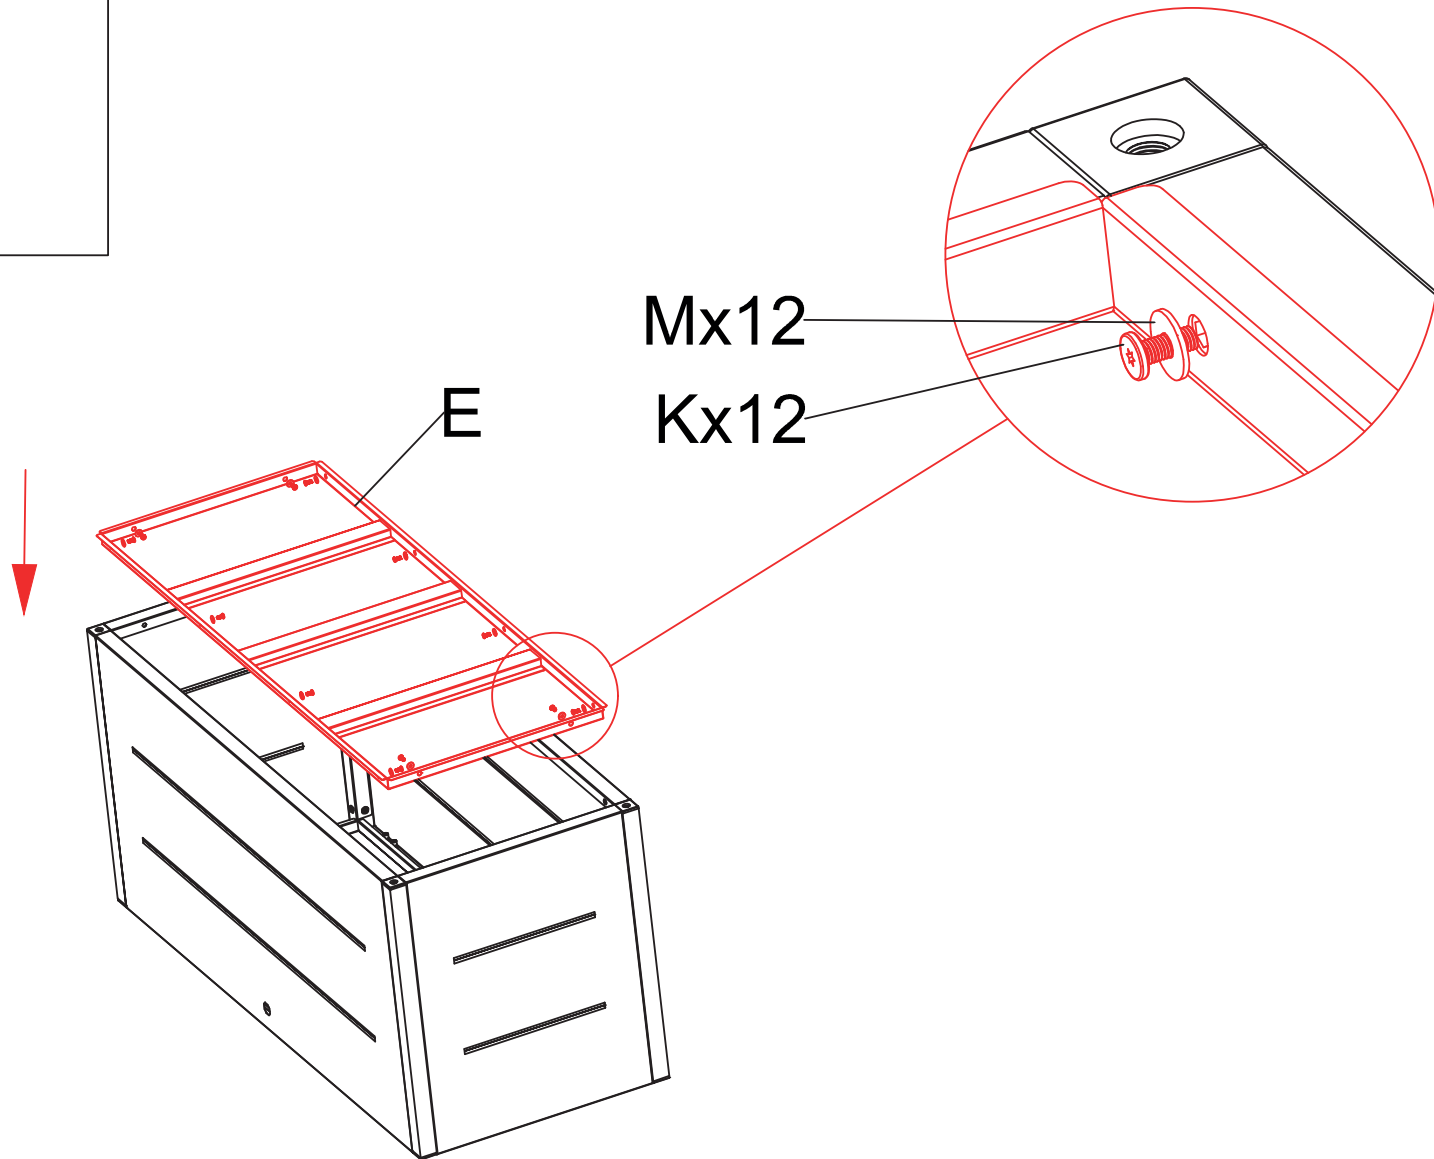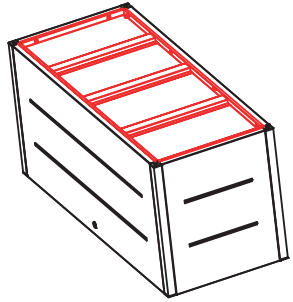

STEP5

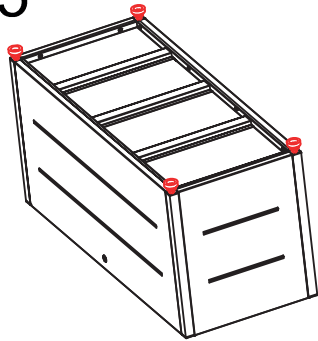


1x4

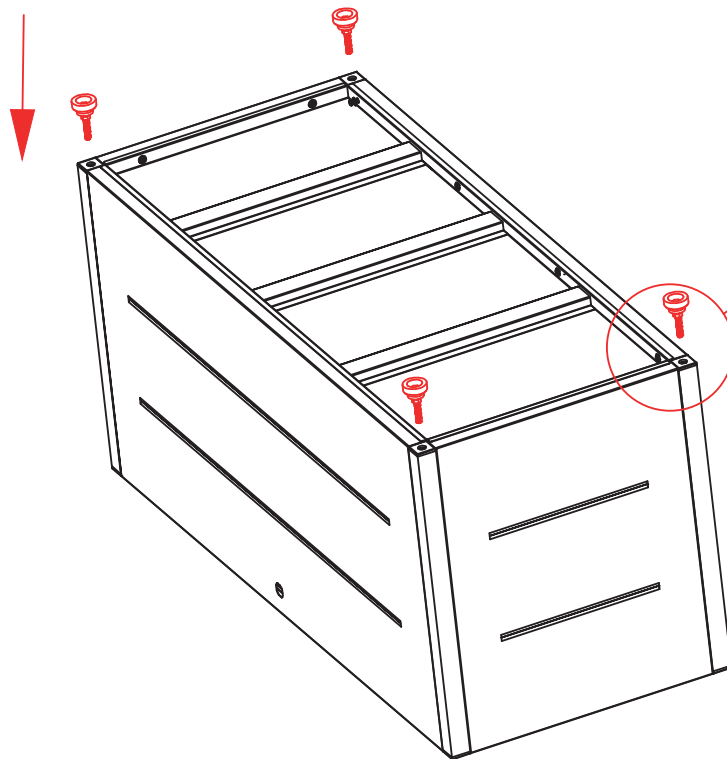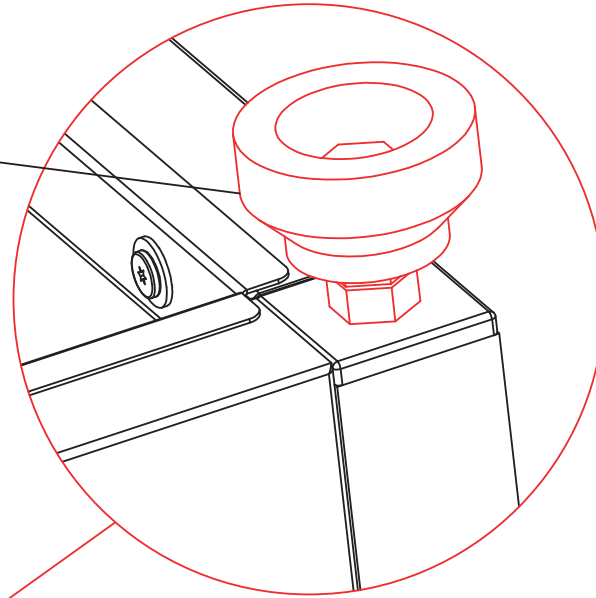


STEP6




Lx6

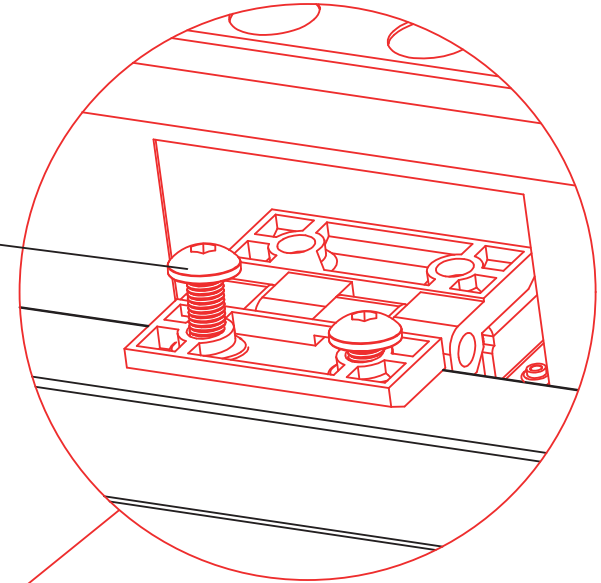


F

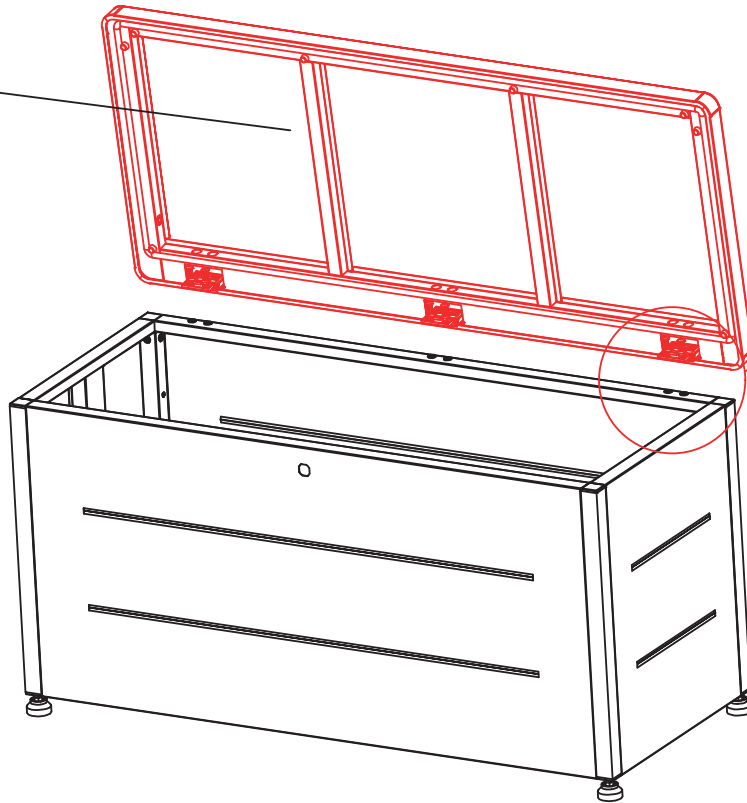


STEP7

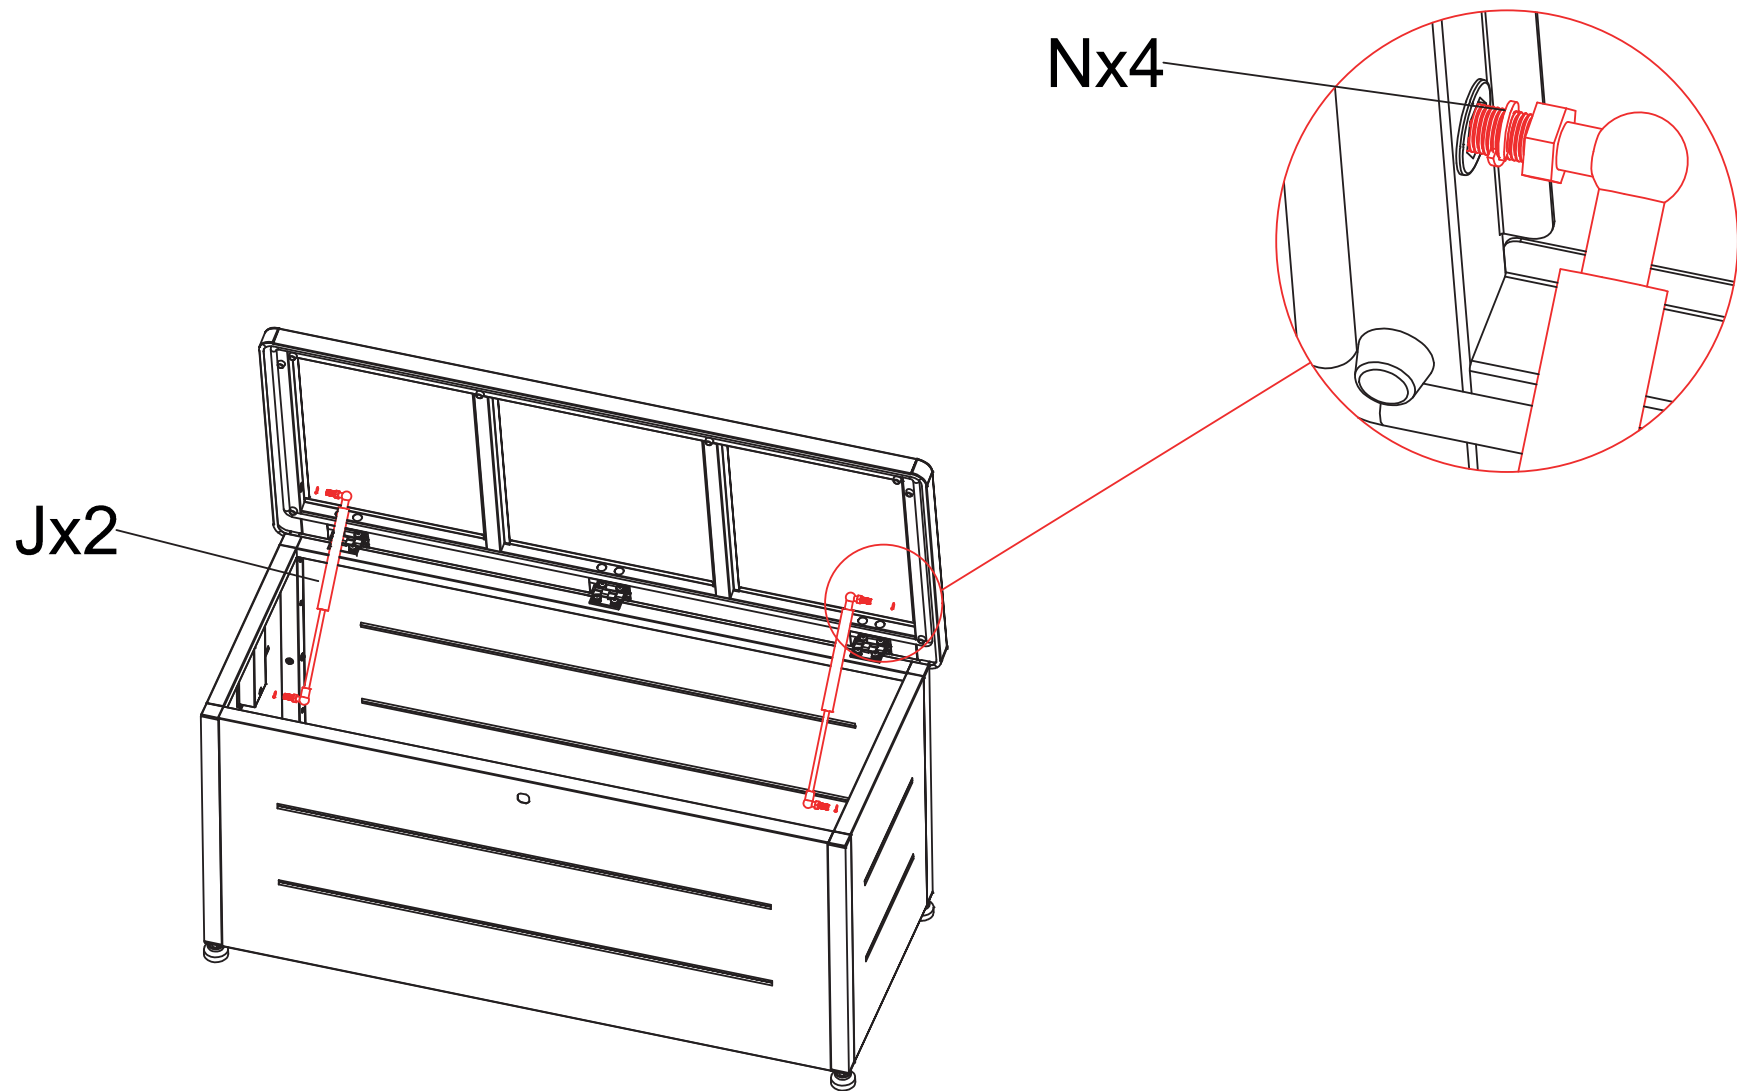

STEP8

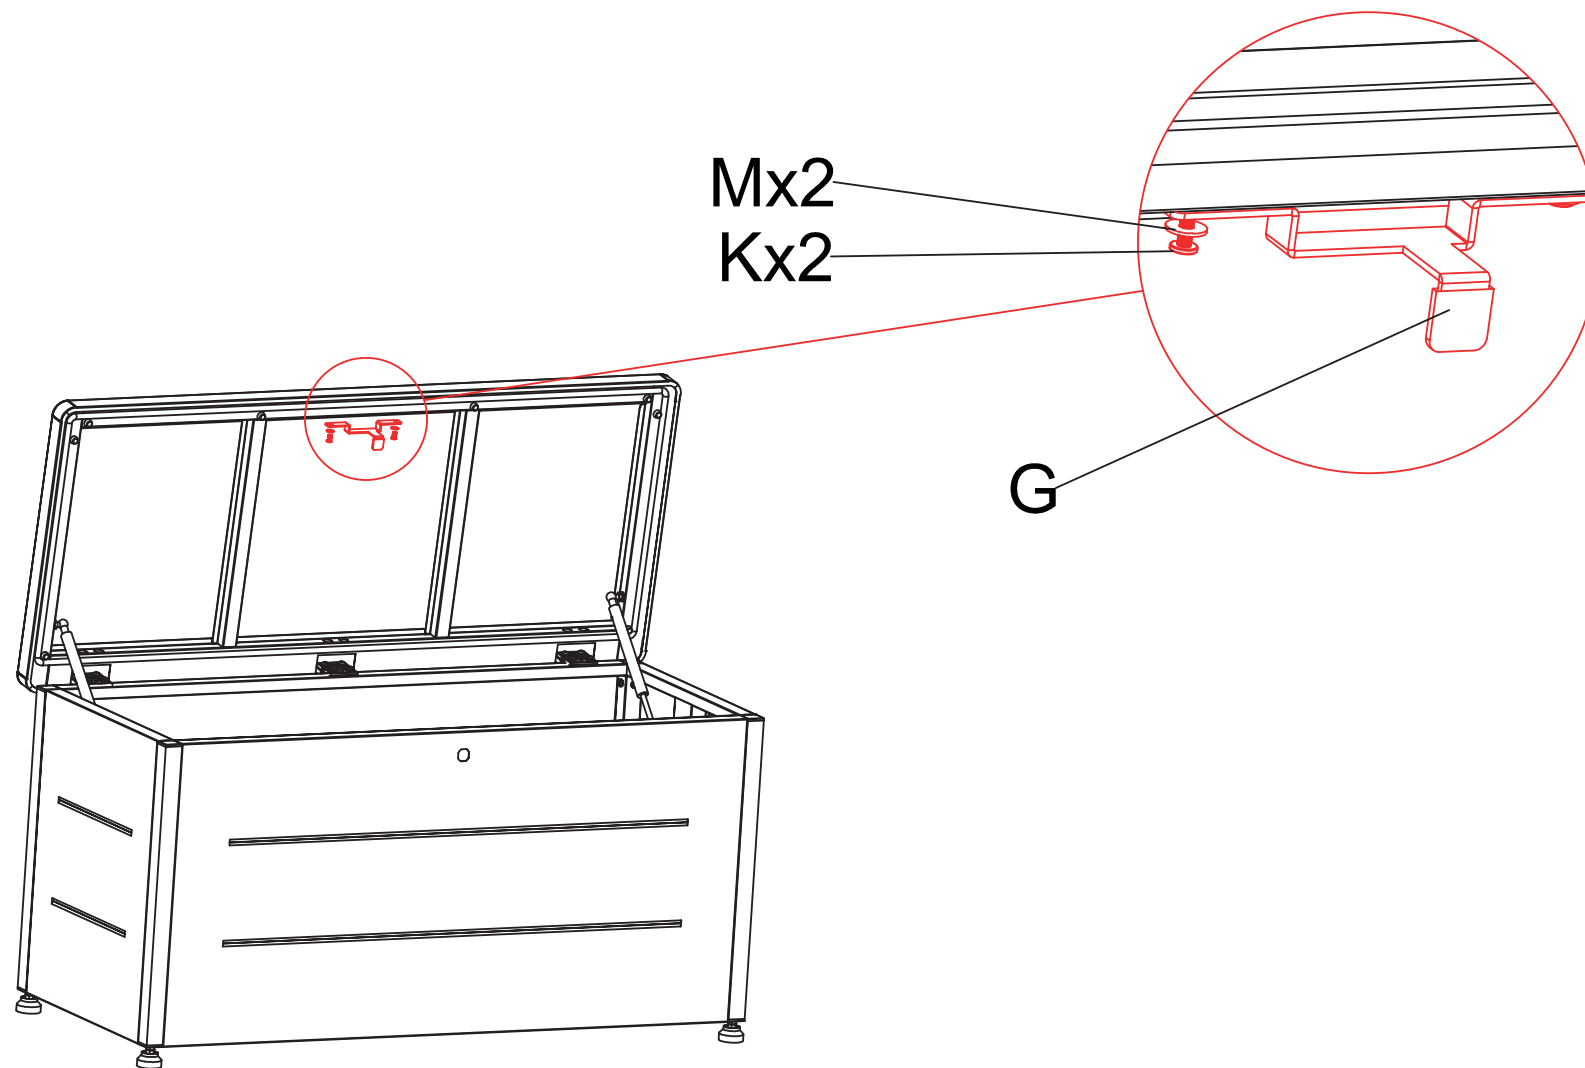

STEP9

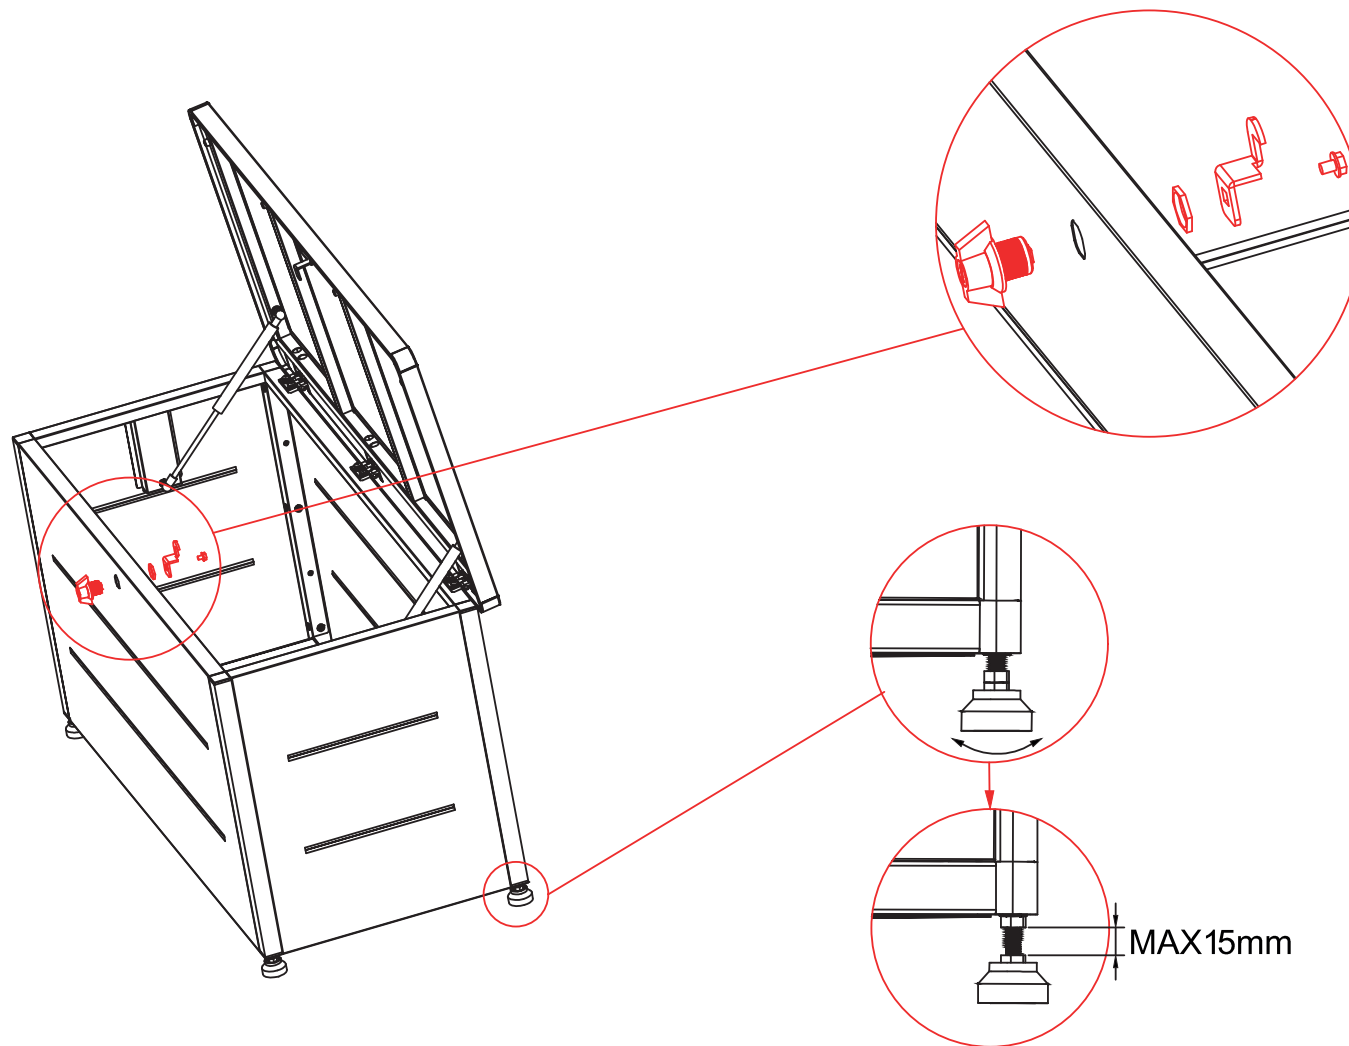

DE: Nach der Installation des Griffs justieren Sie die verstellbaren Füße und verwenden Sie eine Wasserwaage, um sicherzustellen, dass die Box gerade ist.

EN: After installing the handle, adjust the adjustable feet and use a spirit level to ensure that the box is level.